

DE Montageanleitung ViCare Heizkörper-Thermostat	LT Montažo instrukcija ViCare radiatoriaus termostatas
GB Installation instructions ViCare Radiator Thermostat Valve	LV Montāžas instrukcija ViCare siidelementa termostata
FR Notice de montage Thermostat de radiateur ViCare	NL Montagevoorschriften ViCare radiatorthermostaat
BG Упътване за монтаж ViCare термостат за радиатори	PL Instrukcja montażu Termostatu grzejnikowego ViCare
CN 安装指南 ViCare散热器温控阀	PT Instruções de montagem Termostato dos radiadores ViCare
CZ Návod k montáži Termostát topného tělesa ViCare	RO Instrucțiuni de montaj pentru Termostatul ViCare pentru radiatoare
DK Montagevejledning Termostat ViCare	RS Uputstvo za montažu ViCare termostata radijatora
EE Paigaldusjuhend ViCare küttekeha termostaadi	RU Адаптер фланца терморегулирующего вентиля радиаторов ViCare
ES Instrucciones de montaje ViCare termostato del radiador	SE Montageinstruktion ViCare radiatortermostat
FI Asennusohje ViCare-lämpöpatteritermostaatti	SI Navodilo za montažo ViCare radiatorski termostat
HR Uputa za montažu ViCare termostata za radijatore	SK Montážny návod Termostatu vykurovacieho telesa ViCare
HU Szerelési utasítás ViCare fűtőtest-termostát	TR Montaj Kılavuzu ViCare Isitici Termostati
IT Istruzioni di montaggio Termostato per radiatori ViCare	UA Інструкція з монтажу термостата радіаторів ViCare



www.vicare.info



Viessmann Werke GmbH & Co. KG
D-35107 Allendorf
Telefon: 06452 70-0
Telefax: 06452 70-2780
www.viessmann.de

5800251 2/2020

1

2

3

2 x AA/LR6 1,5 V

4

5

6

7

8

9

10

11

FCC ID: 2AIZ9-TR0618
IC: 21680-TR0618

f: 2405,0 - 2480,0 MHz
P_{max}: 0,1 W (e.i.r.p.)

